


DEPTH CALIPER

During construction the height and width of this measurer can be changed to sult your needs. Thus there are no dimensions on the plan.

Slice a ruler down the middle so that it is narrow enough for the job. Cut the shape A (which includes the bit hiding under D) from rigid board to the shape shown. Cut Part B from the centre scrap. The two Parts C may be cut from the hardboard or, preferably, some thinner material just a little thicker than the ruler.

Glue the two Parts C and Part B on to Part A at Position D so that the ruler can slide down between Parts C.

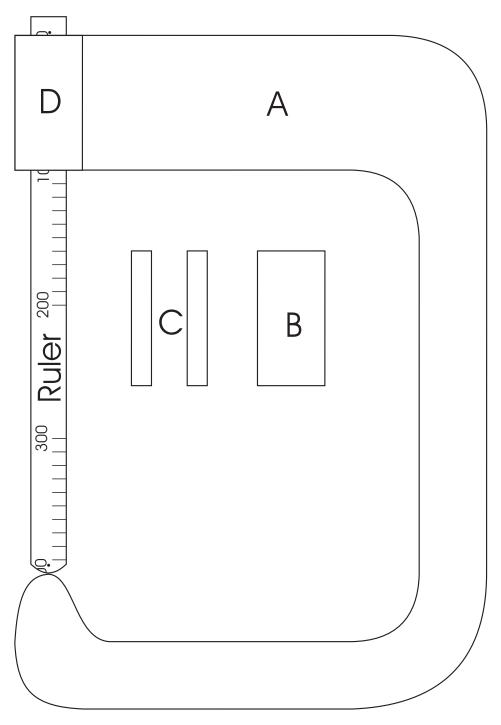

This page was printed from www.sawg.org.nz